


M50 Pro Portable Xylophone

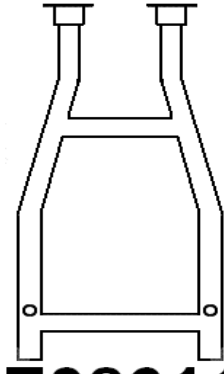

E38601




E38611

E38601 Low end leg assy
E38611 High end leg assy




E50370030

E50370030 Frame W/ Hardware
E39451 Handle
E9520 Velcro leg strap

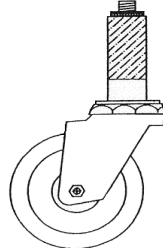


E0140

 

E6160

E6160 leg insert for adj ht expandable stem casters

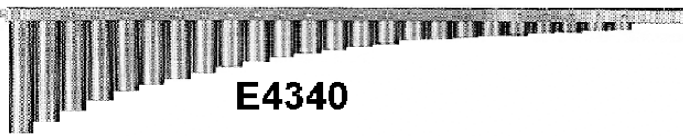

E4340

E4340 Resonator assy, plain

E0140 plain caster for adj ht inst

E0141 brake caster for adj ht inst


E0135 plain caster for fixed ht inst

E0136 brake caster for fixed ht inst




E4341

E4341 Resonator assy, sharp

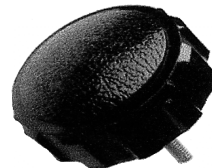


E6161

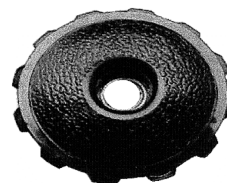

E9784

E6161 5/16\"-18 Plastic knob

E9784 5/16\"-18 Thru knob

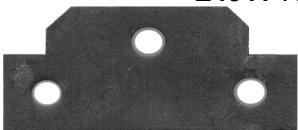

E3937


E3937 LE resonator rubber



E4114

E4114 HE resonator rubber

M50 parts, cont.

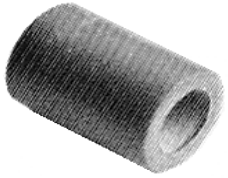


E0305T

E0305T Post insulator
104 on instrument



E0900T

 E0900T Saddle Posts (10pk)
94 on instrument



E0905


E0905 Corner post
8 on instrument



E1902V

E1902V Bar Cord Spring (2pk)
Order 2 packs for one instrument

E4441V Bar cord
One pack per instrument

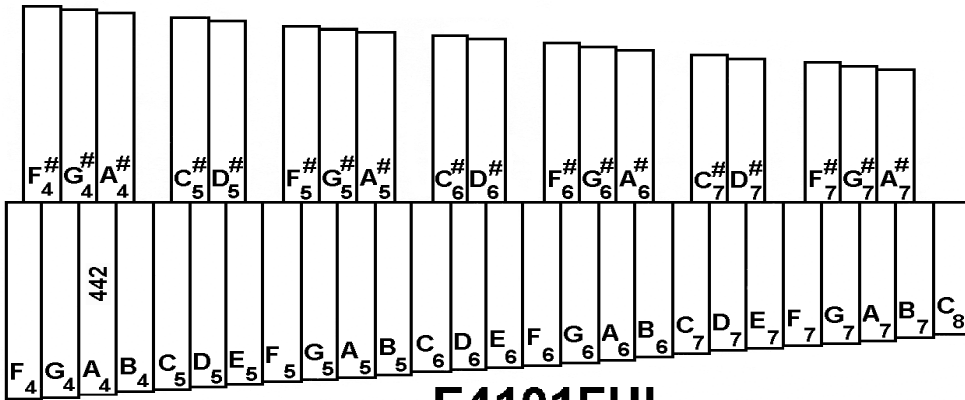

E4101FUL

E4101FUL Set of bars for M50 tuned to A=442
Includes bar cord and springs

NOTE: Xylophone bars have always been A=442

E4101xxx Individual bars for M50
(Ex: E4101FN4 is lowest bar, 1/2 step up is E4101FS4)

E4101TR Tune and re-finish M50 bars, per octave



E4074



E4069

- E4074** HE leg brace
- E4069** LE leg brace
- E4491** Add on Carrrier Bracket
- E2590** Wing Nut
- E2460** 1/4-20 lock nut

E2590 connects brace to leg assy

E2460 connects brace to Carrier Bracket