


# M51 Pro Portable Xylophone

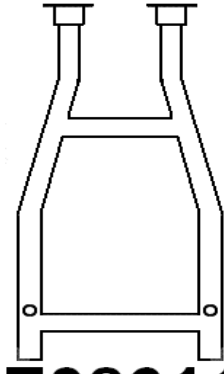

**E38601**




**E38611**

**E38601** Low end leg assy  
**E38611** High end leg assy



**E50370030**

**E50370030** Frame W/ Hardware  
**E39451** Handle  
**E9520** Velcro leg strap

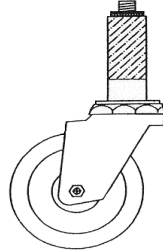


**E0140**



**E6160**

**E6160** leg insert for adj ht expandable stem casters

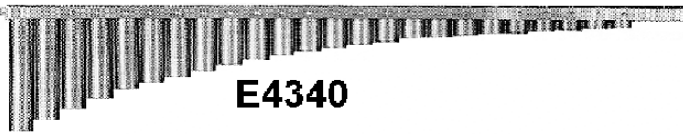

**E4340**

**E4340** Resonator assy, plain

**E0140** plain caster for adj ht inst

**E0141** brake caster for adj ht inst


**E0135** plain caster for fixed ht inst

**E0136** brake caster for fixed ht inst




**E4341**

**E4341** Resonator assy, sharp

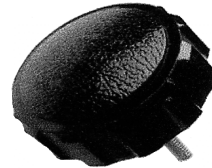


**E6161**

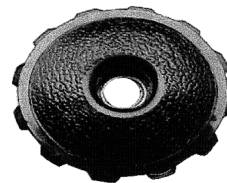

**E9784**


**E6161** 5/16"-18 Plastic knob

**E9784** 5/16"-18 Thru knob

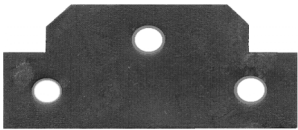

**E3937**


**E3937** LE resonator rubber

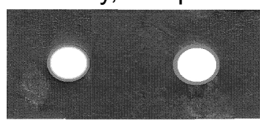

**E4114**

**E4114** HE resonator rubber

M51 parts, cont.

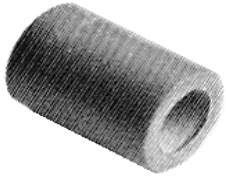


## E0305T

**E0305T** Post insulator  
104 on instrument



## E0900T

 **E0900T** Saddle Posts (10pk)  
94 on instrument



## E0905


**E0905** Corner post  
8 on instrument



## E1902V

**E1902V** Bar Cord Spring (2pk)  
Order 2 packs for one instrument

**E4441V** Bar cord  
One pack per instrument

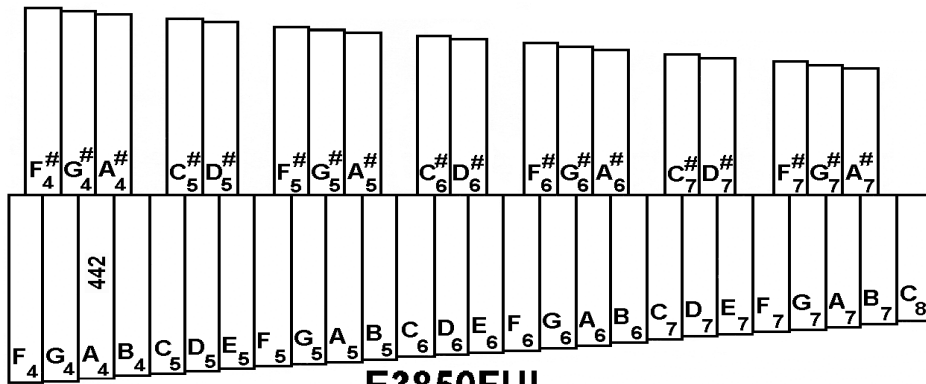

## E3850FUL

**E3850FUL** Set of bars for M51 tuned to A=442  
Includes bar cord and springs

**NOTE:** Xylophone bars have always been A=442

**E3850xxx** Individual bars for M51

(Ex: E3850FN4 is lowest bar, 1/2 step up is E3850FS4)

**E3850TR** Tune and re-finish M51 bars, per octave.



## E4074



## E4069

**E4074** HE leg brace

**E4069** LE leg brace

**E4491** Add on Carrrier Bracket

**E2590** Wing Nut

**E2460** 1/4-20 lock nut

E2590 connects brace to leg assy

E2460 connects brace to Carrier Bracket