



# M75 Century Vibraphone

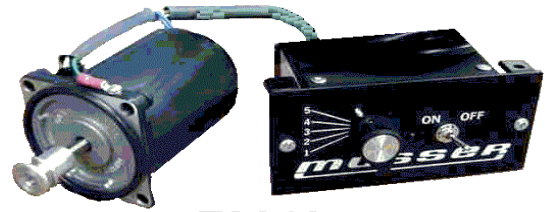


**E3646**

- E3646** Motor and control assy
- E36191** Motor w/connector
- E3634** Motor control unit
- E3617** ON/OFF switch
- E3632** Small potentiometer
- E3621** Control box mounting bracket
- E3630** Speed control knob
- E3631** Motor pulley
- E30601** Motor Panel w/Pins

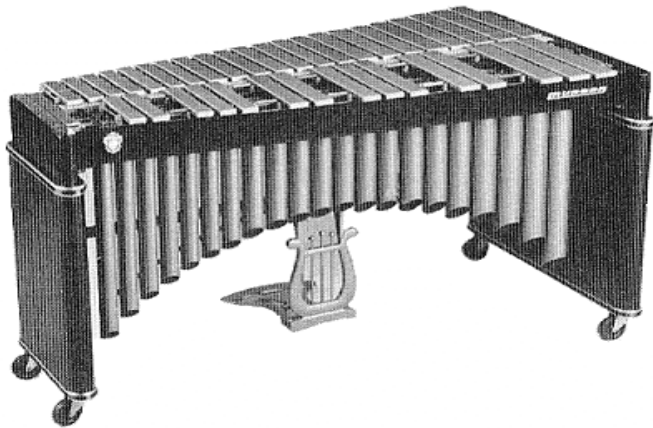

- E0412** Motor mounting Ring
- E0408** Vibe motor Belt  
6" dia. (18.385 long)

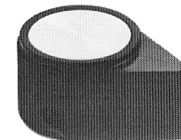


**E3630**




**E4342**

- E4342** Resonator and pulsator assembly, plain
- E4343** Resonator and pulsator assembly, sharp

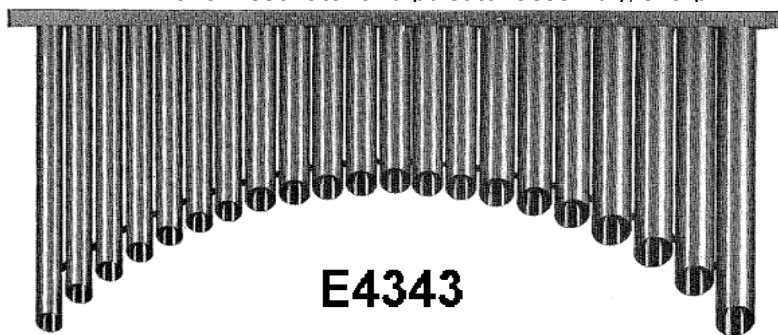


**E4343**

- E4354** Pulsator shaft assembly, plain
- E4355** Pulsator shaft assembly, sharp
- E31541** Low end bearing bracket w/o nyliner
- E31561** Center bearing bracket w/o nyliner
- E31551** High end bearing bracket w/o nyliner
- E3157** Nyliner

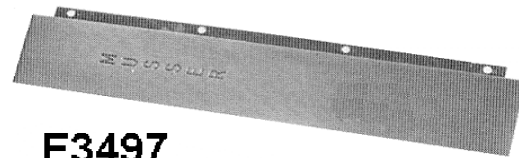

**E3497**

- E3497** Belt Cover plate  
Will fit older models with some work.




**E33281**



**E3631**

- E33281** Pulsator shaft pulley  
Older models used this on the motor also

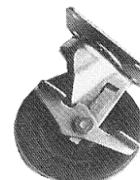

**E0128**




**E0129**

- E0128**
- E0129**

- 3" Caster w/brake
- 3" Caster, plain

M75 parts, cont.

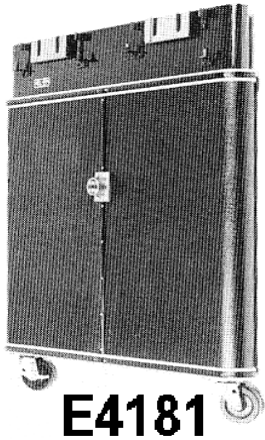

**E4181**


**E4181** Low end assembly

- E3125** Low end resonator plate, plain
- E3126** Low end resonator plate, sharp
- E3127** Low end resonator rubber (2 per)
- E3546** #1 LE rail bracket
- E34411** #2 LE rail bracket
- E34401** #3 LE rail bracket
- E3552** #4 LE rail bracket, top
- E3553** #4 LE rail bracket, bottom


**E4180** High end assembly

- E3547** #1 HE rail bracket
- E3555** #4 HE rail bracket, top
- E3556** #4 HE rail bracket, bottom

- E3499** Crossbar and Lyre assembly
- E3475** Lyre assembly only
- E97892** Diagonal brace (2 required)
- P1534** Female "T" handle for braces

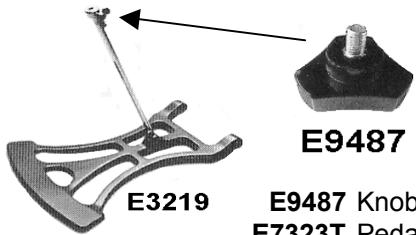


- E3219** Pedal and lower pullrod
- E32262** Lower pullrod only
- E9487** Knob for pullrod
- E7323T** Pedal felt (10 pk)

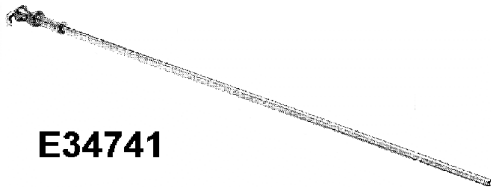


**E34741**

**E34741** Upper pullrod

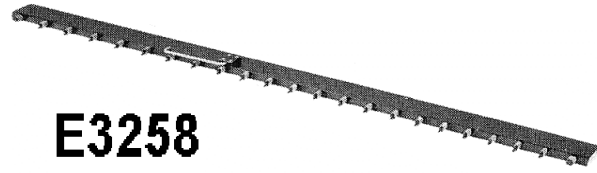


**E3258**

**E3258** Rail #1 (Closest to player)

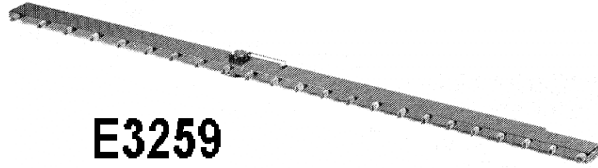


**E3259**

**E3259** Rail #2

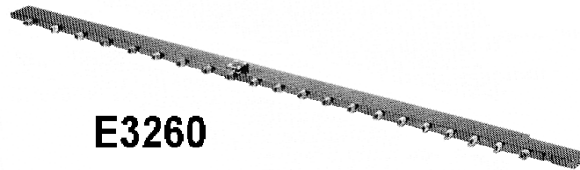


**E3260**

**E3260** Rail #3

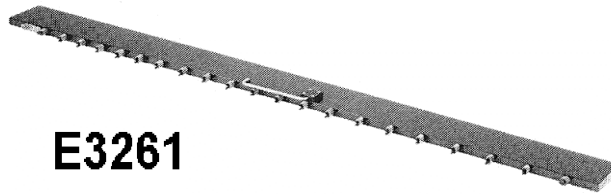

**E3261**

**E3261** Rail #4 (Closest to Audience)

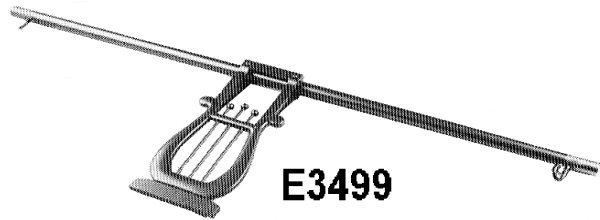


**E3499**



**E0900T**

**E0900T** Saddle post (10pk)  
40 per instrument



**E0901T**

**E0901T** Hook Post (10 pk)  
40 per instrument



**E0905**

**E0905** End Post  
4 per inst, 1&4 rails



**E0912**


**E0912** End Post  
4 per inst, 2&3 rails



**E0300T**


**E0300T** Post insulator (10 pk)  
88 per instrument

M75 parts, cont.

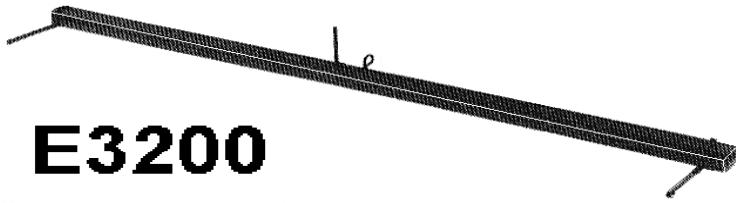


# E3200

- E3200** Damper bar assembly
- E3215** Eye hook 1/4 20 x 2"
- E2455** Hex nut 1/4 20 (2 req to hold eye hook)
- E3202** Damper stud

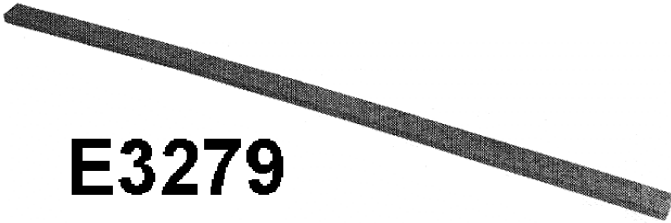

# E3279

**E3279** Damper felt, 1/2" x 1 1/2" x 51"

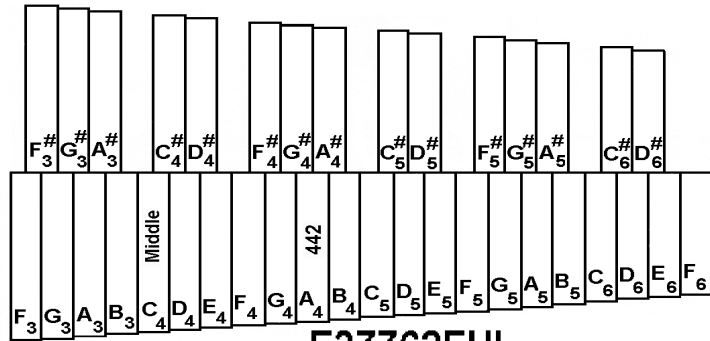

# E37762FUL


- E37762FUL** Full set of bars for M75, tuned to A=442
- E37762FULW0** Full set of bars for M75, tuned to A=440
- Standard tuning changed from A=440 to A=442 on 1/1/94
- E37762xxx** Individual bars.
- (Ex: Middle C = E37762CN4, 1/2 step up is E37762CS4)



# E1902V

- E1902V** Pack of 2 springs
- Order 2 packs for one instrument

- E4441V** Green bar cord
- One pack does one instrument

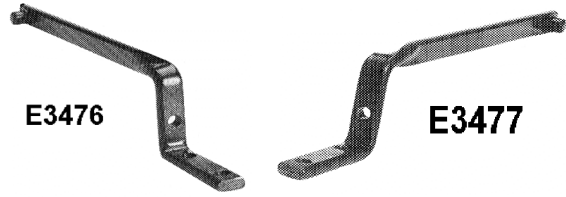

**E3476**

**E3477**

- E3476** Low end damper arm
- E3216** Mounting clip for E3476
- E3477** High end damper arm
- E3217** Mounting clip for E3477




**E32111**



**E3213**

- E32111** Damper spring
- E3213** Damper Spring bracket

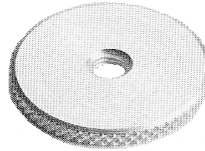


**E32031**



**E3206**

- E32031** Damper adjustment nut
- E3206** Felt Washer

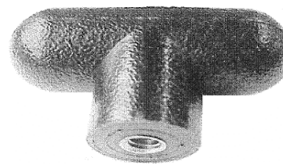

**P1534**



**E2477**

- E2477** Wing nut
- Used to lock damper spring

- P1534** Female "T" handle for braces